


Amino Remote Control Guide

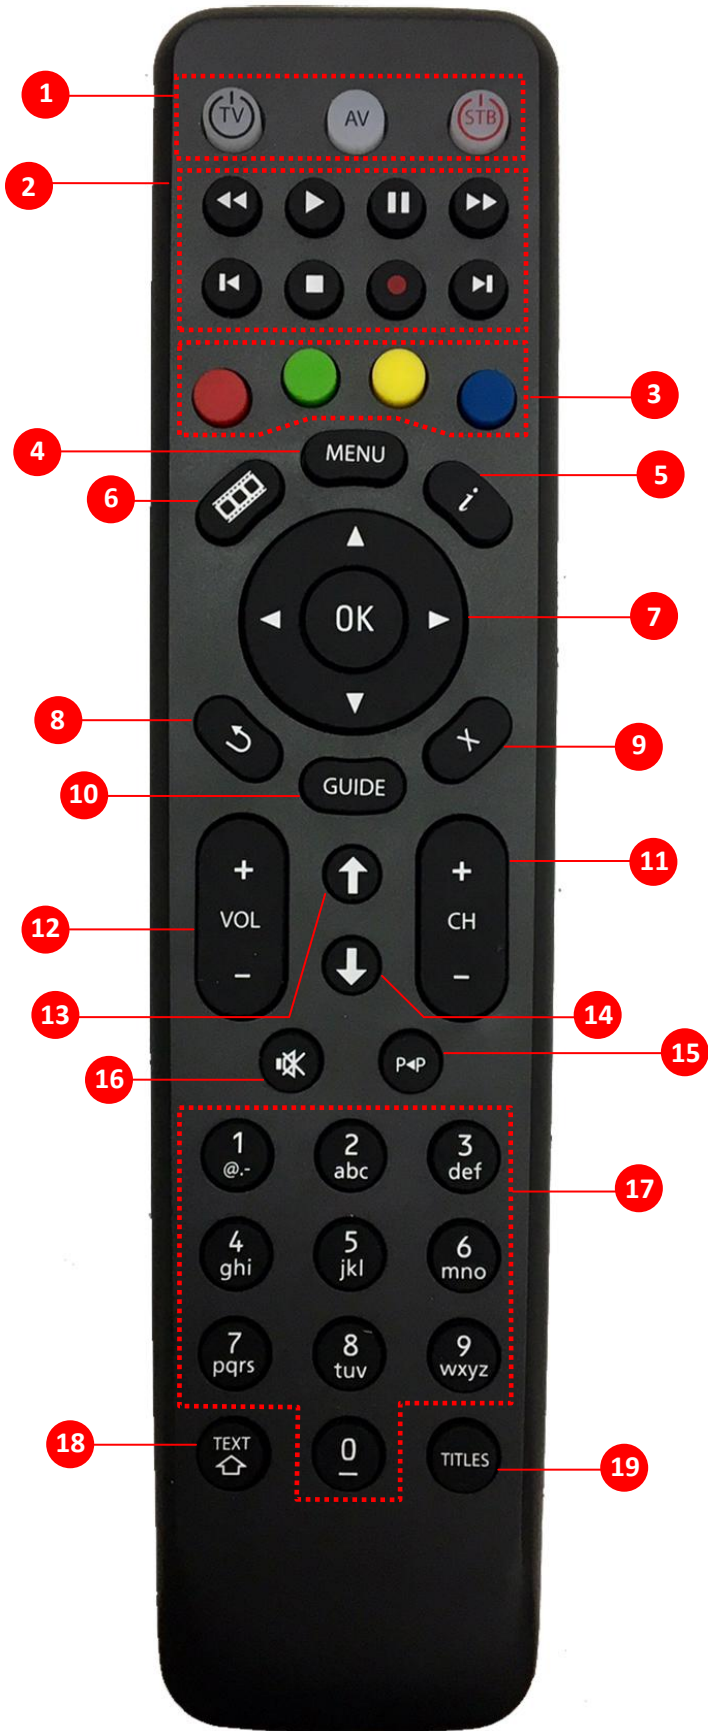

- | | | |
|-----|-----------------|--|
| 1. | DEVICE CONTROLS | TV: Powers TV on/off (if programmed)
STB: This button is pre-programmed to power the set top box on/off
AV: Changes input to TV (if programmed) |
| 2. | TRANSPORT KEYS | Controls video programs
◀◀ REW: Rewinds programming
▶▶ PLAY: Plays programming / resumes a paused program
⏸ PAUSE: Pauses programming
▶▶▶ FF: Fast forwards video
◀◀◀ LAST CHAPTER: Goes back in programming
■ STOP: Stops playback of video
● RECORD: Starts or stops recording a program
▶▶▶ NEXT CHAPTER: Advances forward in programming |
| 3. | SHORTCUT KEYS | RED: Displays on-screen information about the current program
GREEN: Toggles closed captioning on/off
YELLOW: Displays on-screen program guide
BLUE: Goes back one level within menus |
| 4. | MENU | Displays on-screen menu or home screen |
| 5. | INFO | Displays on-screen information about the current program |
| 6. | PVR | Button not active |
| 7. | NAVIGATION | ARROW KEYS: Navigates within the on-screen guide/menus
OK: Executes the currently selected menu option
LEFT/RIGHT: Rewinds/fast forwards video |
| 8. | BACK | Goes back one level within menus |
| 9. | EXIT | Exits the current menu item or back to LIVE TV |
| 10. | GUIDE | Displays the on-screen program guide |
| 11. | CH +/- | Changes channel up/down and pages up/down within the on-screen program guide |
| 12. | VOL +/- | Increases or decreases TV volume |
| 13. | UP ARROW | Pages up within the on-screen program guide |
| 14. | DOWN ARROW | Pages down within the on-screen program guide |
| 15. | P<P | Displays previous channel |
| 16. | MUTE | Turns TV volume on/off |
| 17. | NUMBER KEYS | Allows direct access to specific channels and menu items |
| 18. | TEXT | Teletext button (press and release) or TV SHIFT function (press and hold) |
| 19. | TITLES | Turns subtitles on/off |